

AF6 Parts Breakdown

Part Number	Part Description	Q'TY
1	TANK	1
2	AIR COMPRESSOR PUMP	1
3	JOINT 2.0-1/4 in	1
4	DRAIN VALVE	1
5	AIR VALVE	1
6	JOINT 2.0-1/2 in	1
7	CHECK VALVE	1
8	OUTLET PIPE	1
9	ELBOW JOINT	1
10	RELEASE PIPE	1
11	PRESSURE GAUGE	1
12	PRESSURE SWITCH	1
13	SAFETY VALVE	1
14	NIPPLE JOINT	1
15	BELT GUARD-IN	1
16	BELT GUARD-OUT	1
17	MOTOR	1
18	SHAFT KEY	1
19	MOTOR PULLEY	1
20	MOTOR CABLE	1
21	BELT	1
22	LOCK BOLT FOR MOTOR	4
23	WASHER FOR MOTOR	8
24	SPRING WASHER FOR MOTOR	4
25	LOCK NUT FOR MOTOR	4
26	LOCK BOLT FOR PUMP	4
27	WASHER FOR PUMP	4
28	SPRING WASHER FOR PUMP	4
29	LOCK NUT FOR PUMP	4
30	LOCK BOLT FOR BELT GUARD-IN	6
31	WASHER FOR BELT GUARD-IN	6
32	LOCK PLUG FOR BELT GUARD-OUT	5
33	LOCK BOLT FOR MOTOR PULLEY	2
34	LOCK NUT FOR BELT GUARD-IN	6

