

# AF9G Parts Breakdown

NO.	DESCRIPTION	Q'TY
A	compressor pump	1
B	engine	1
1	air tank	1
2	belt cover	1
3	pressure gauge	1
4	safty valve HP	1
5	pilot valve w/release	1
6	drain valve	1
7	stop valve	1
8	check valve	1
9	outlet pipe	1
10	unloading pipe	1
11	outlet elbow	1
12	joint-T	1
13	nipple joint	1
14	idle valve	1
15	tube of idle valve	1
16	engine pully	1
17	key	1
18	bushing joint	1
19	oil-ring	2
20	belt	2
21	bushing joint	1
22	inspect plug	1
23	nipple joint	2
24	safty valve LP	1
51	lock bolt for pump	4
52	washer	4
53	spring washer	4
54	lock nut	4
55	lock bolt for pump	4
56	washer	8
57	spring washer	4
58	lock nut	4
59	lock bolt for belt cover	4
60	washer	4
61	lock bolt for engine pulley	2

